

Temperaturfühlerpaar



Table with 26 columns (DE to ZH) and 1 row. Each cell contains a translation of 'Temperaturfühlerpaar' for a specific language.

Table with 26 columns (DE to ZH) and 1 row. Each cell contains a translation of 'Lieferumfang' (Scope of Delivery) for a specific language.

Table with 26 columns (DE to ZH) and 1 row. Each cell contains a translation of 'EU-Richtlinien Konformitätserklärung' (EU Directive Conformity Declaration) for a specific language.

Large table with 26 columns (DE to ZH) and multiple rows. Each row contains technical specifications and translations for a specific product variant.

Table with 26 columns (DE to ZH) and 1 row. Each cell contains a translation of 'Lagerung / Entsorgung' (Storage / Disposal) for a specific language.



Temperaturfühlerpaar



Table with 24 columns (DE, BG, CS, DA, EN, ES, ET, FR, HU, IT, LT, LV, NL, NO, PL, PT, RO, RU, SK, SL, SV, TR, ZH) and multiple rows of technical specifications for temperature sensors.

Table with 24 columns (DE, BG, CS, DA, EN, ES, ET, FR, HU, IT, LT, LV, NL, NO, PL, PT, RO, RU, SK, SL, SV, TR, ZH) and multiple rows of installation and safety instructions for temperature sensors.



Temperaturfühlerpaar



Table with 26 columns (DE, BG, CS, DA, EN, ES, ET, FR, HU, IT, LT, LV, NL, NO, PL, PT, RO, SK, SL, SV, TR, ZH) and 1 row of installation instructions for the temperature sensor pair.

Main assembly table with 26 columns (DE, BG, CS, DA, EN, ES, ET, FR, HU, IT, LT, LV, NL, NO, PL, PT, RO, SK, SL, SV, TR, ZH) and 15 rows of detailed assembly steps (1-15) for the temperature sensor pair, including diagrams and instructions for various components like O-rings, screws, and seals.